



FOLLOW 1, 2 OR 3 DEPENDING ON DIRECTION DOOR OPENS. (INSTALL WITH FRONT COVER OFF).

1. IF YOUR DOOR OPENS TO THE INSIDE


Open door and position DRIVE MAGNET on underside of top of door frame at center point. (Fig. A). Attach with countersink screws allowing DRIVE MAGNET to extend 2-1/2" beyond door frame. (Fig. B).

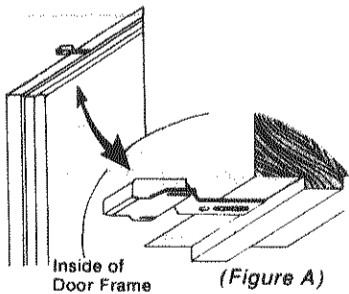

Close door and center CHIME BOX under DRIVE MAGNET. Raise to within 1/16" and attach to door. (Fig. C). CHIME BOX can be attached using either foam tape or two screws. (Use foam tape ONLY on clean and dry surface.)

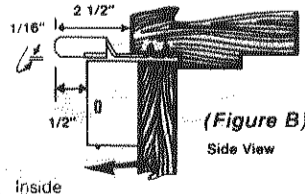



TEST FOR PROPER ALIGNMENT. As door opens plunger should be propelled downward to hit the CHIME BAR. When door is closed, plunger should return to its holding position. If necessary, adjust DRIVE MAGNET in or out for correct alignment.

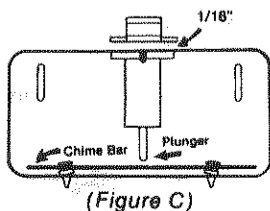


Note: When front cover is replaced full volume will be achieved.

2. IF YOUR DOOR OPENS TO THE OUTSIDE

Remove metal mounting strip from DRIVE MAGNET by pulling straight out leaving magnet in plastic housing. **IMPORTANT!** If magnet is removed from housing, it must be replaced EXACTLY as shown with the white magnet mark down. Place metal shim on magnet and push into housing. If this correct position is not maintained the chime will not function properly.

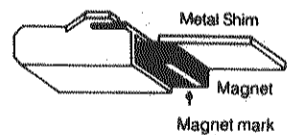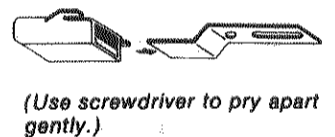


Position DRIVE MAGNET on the interior side at the center of door frame. (Fig. A). See below for alternate door style.

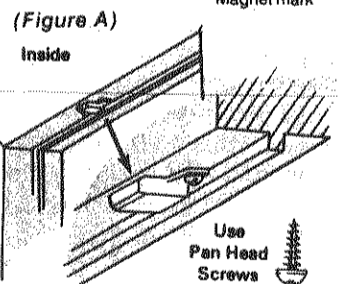



Attach DRIVE MAGNET with two panhead screws so it is spaced 3/8" from closed door. (Fig. B).

Center CHIME BOX under DRIVE MAGNET. Raise to within 1/16" and attach to door. (Fig. C). CHIME BOX can be attached to door using either the foam tape or two screws. (Use foam tape only on clean and dry surface.)

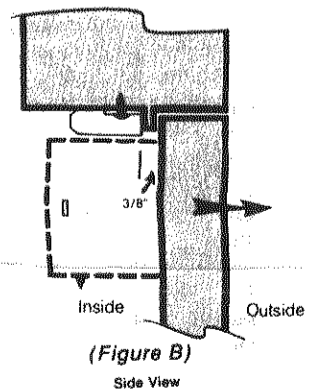

TEST FOR PROPER ALIGNMENT. As door opens, plunger should be propelled downward to hit the CHIME BAR. When door is closed plunger should be attracted up to its holding position. If necessary, adjust DRIVE MAGNET making sure it is 3/8" or closer to closed door.


Note: When front cover is replaced, full volume will be achieved.

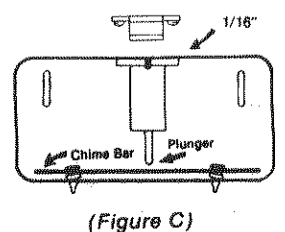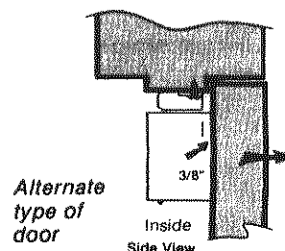

3. IF YOUR DOOR SWINGS BOTH WAYS


(Requires Additional Drive Magnet From Dealer (Part No. 3-SD))

Open door and position DRIVE MAGNET on inside of door frame at center point. Attach second DRIVE MAGNET so it extends to outside, opposite first DRIVE MAGNET. (Fig. A). Use enclosed countersink screws.

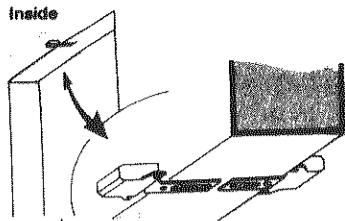


(Figure A)

Close door and center CHIME BOX under inside DRIVE MAGNET. Raise to within 1/16" and attach to door. (Fig. B). CHIME BOX can be attached using either foam tape or two screws. (Use foam tape only on clean and dry surface.) Inside DRIVE UNIT must extend 1/2" or more past CHIME BOX (Fig. C).

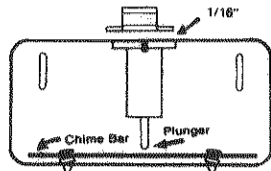

(Figure B)

TEST FOR PROPER ALIGNMENT. As door opens to inside the CHIME PLUNGER must pass directly under the inside DRIVE MAGNET. The plunger should be propelled downward causing the chime to sound. As door opens to outside, the plunger must pass under outside DRIVE MAGNET. If necessary adjust DRIVE MAGNETS to achieve these results.

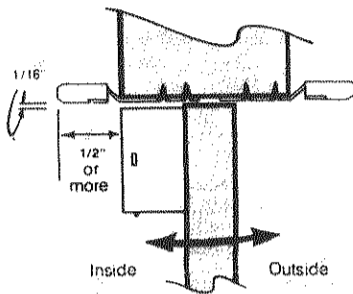

(Figure C)

Side View


Note: When front cover is replaced, full volume will be achieved.

Five Year Limited Warranty

This product is warranted to the original purchaser to be free from defects in material and workmanship under normal use for a period of five years from purchase date. If the product becomes defective during the warranty period it will be replaced or repaired with no charge for parts or labor. The purchaser shall bear the shipping and packing cost of \$7.00. This warranty will not apply if the product has been misused, altered or abused. For warranty service return product with proof of purchase and \$7.00 to: MORRIS INDUSTRIES, INC. Chime Alert Division. 622 Baxter Ave., Louisville, KY 40204


NO BATTERIES OR ELECTRICITY NEEDED! ChimeAlert EASY INSTALLATION GUIDE

Tools Required: Screwdriver, Drill, 1/8" Drill Bit

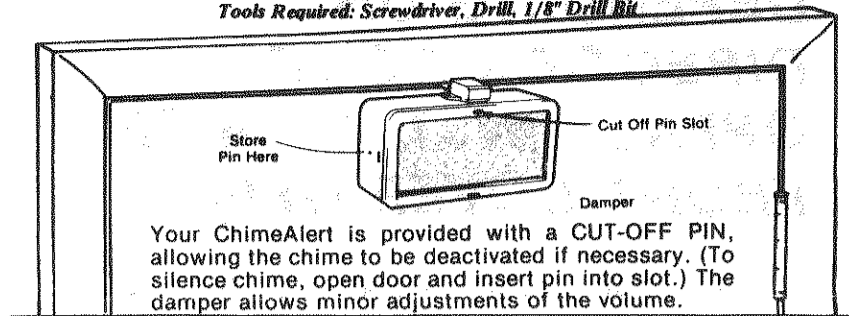


SHOWN MOUNTED ON DOOR OPENING TO INSIDE

Remove front cover by inserting a small screwdriver into side slot and push to release cover. DO NOT USE EXCESSIVE FORCE!

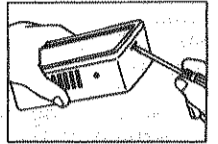


Remove CARDBOARD PACKING and PARTS BAG from inside box. If CHIME BAR has become dislodged during shipping, replace it upon the RUBBER MOUNTS so it is evenly settled as shown.

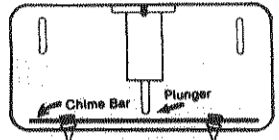

Parts Supplied	Drive Magnet	Cut off pin	Metal Shim	Pan Head	Countersink

PRE-INSTALLATION TEST

Replace front cover on CHIME BOX with the cut-off pin slot (←) at the top. (COVER MUST BE ON TO ACHIEVE FULL VOLUME.) Hold the Chime Alert up against the door at about eye level. The solid surface helps provide resonance creating a louder chime. Place the DRIVE MAGNET on the CHIME BOX. (FIG. A). YOU SHOULD HEAR A "SNAP" which is the inside MAGNET being attracted up. Pull the DRIVE MAGNET straight across, causing the CHIME to sound. (FIG. B). Test ring several times and notice the ATTRACTING and REPELLING action as the DRIVE MAGNET is pulled across.

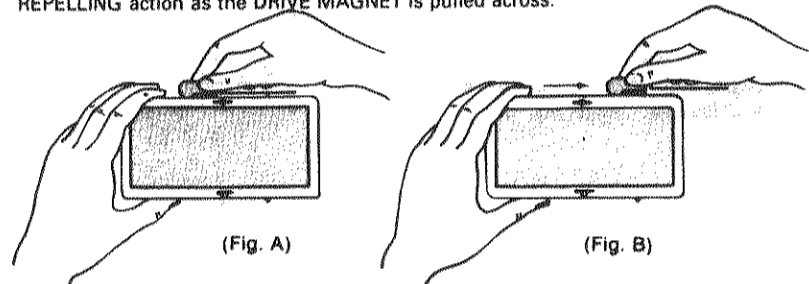

(Fig. A)

(Fig. B)