

QUICKSTOP FIRE SPRINKLER TOOL INSTRUCTIONS FOR USE


Step 1 – Slide the upper arms of the tool around threaded portion of the fire sprinkler.

Step 2 – Push the tool forward aggressively until it cannot go any further.

Step 3 – Squeeze the handle until the tool locks in place.

Recessed Heads

You may need to remove the circular disk around recessed sprinkler heads to be able to access the threaded portion of the head.

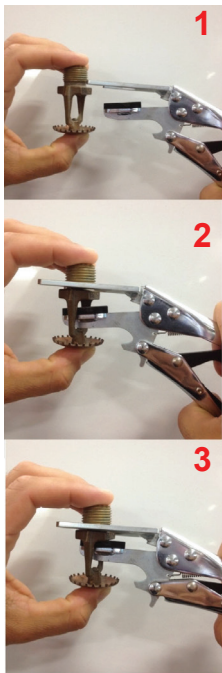

HELPS STOP WATER DAMAGE FROM FIRE SPRINKLERS

For product information visit www.sti-usa.com. Quickstop Tools and STI are not liable for any damages caused by negligence or improper use. Tested up to 350 PSI.

Warranty: Each Quickstop tool is warranted to be free from defects in material and workmanship for five (5) years. Return the tool to place of purchase for a replacement if warranty applies.



**Safety Technology
International**

