


FRONT VIEW

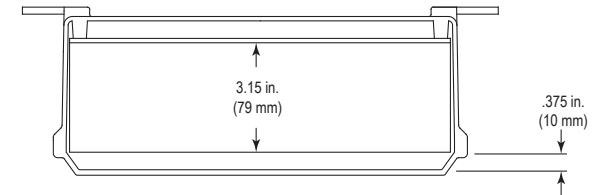

TOP VIEW
INTERNAL PRODUCT
DIMENSIONS

INSTALLATION INSTRUCTIONS

1. Insert the (4) mounting tabs into the (4) back box slots.
2. Using the installed mounting tabs as a template, mark and drill (4) 1/4 in. diameter holes and complete installation as shown.

CLEANING INSTRUCTIONS

Rinse with water to remove abrasive dust and dirt. Wash with soap or mild detergent using a soft cloth. **DO NOT SCRUB OR USE BRUSHES OR ABRASIVES.** Rinse once more, then dry with a soft cloth or chamois. To remove grease or wet paint, rub gently with a cloth wetted thoroughly with naphtha. Then wash and rinse. **DO NOT USE RAZOR BLADES OR GASOLINE.**

WARNING: This product can expose you to chemicals including Dichloromethane, which is known to the State of California to cause cancer, and Bisphenol A (BPA), which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

Three year warranty or a one year limited warranty (from date of purchase) on most products. See website for details. Electronic warranty form at www.sti-usa.com/wc14.



USA

STI-7520 & STI-7521 NEMA 4X PROTECTIVE CABINET
All specifications and information shown were current as of publication and are subject to change without notice.
7520_211S DEC03



EMEA