



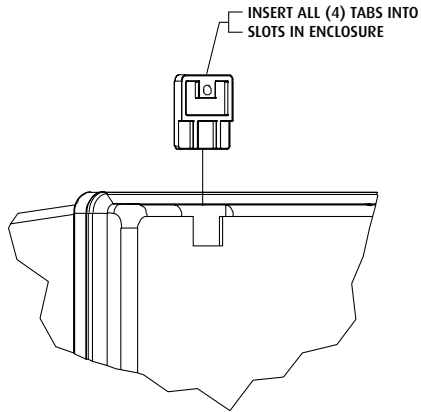


STEP 1

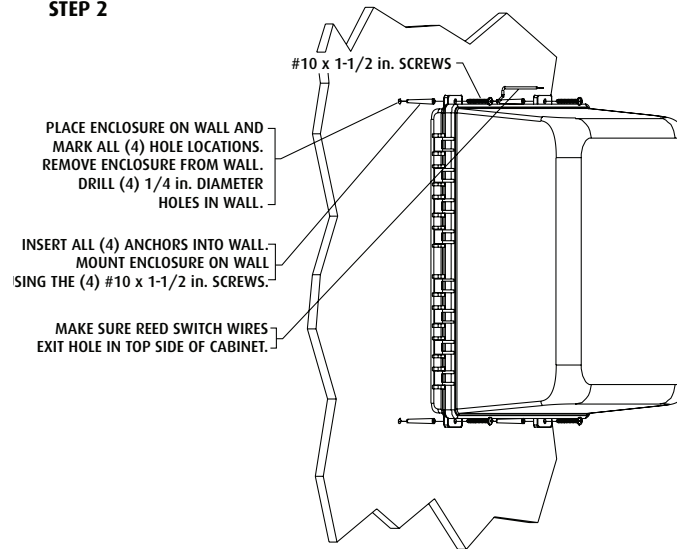

STEP 2



STEP 3

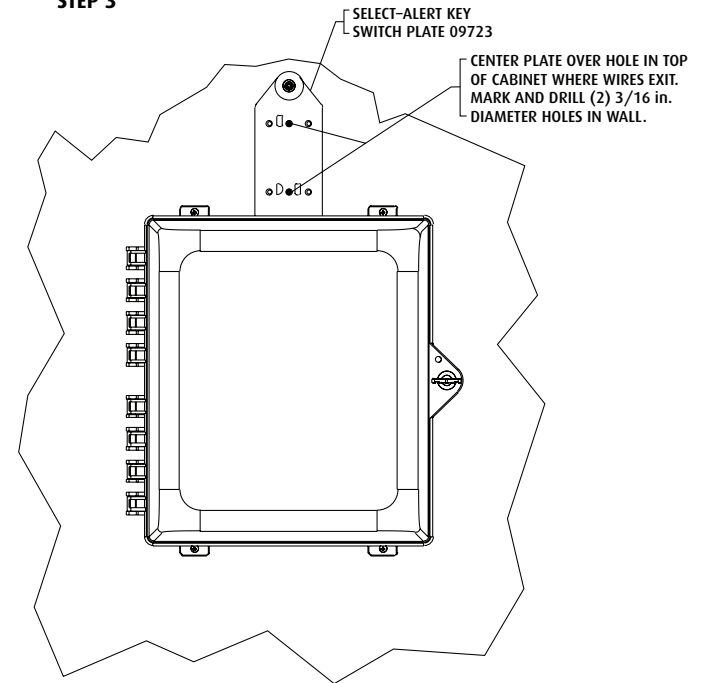

⚠ WARNING: This product can expose you to chemicals including Dichloromethane, which is known to the State of California to cause cancer, and Bisphenol A (BPA), which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

Three year warranty or a one year limited warranty (from date of purchase) on most products. See website for details. Electronic warranty form at www.sti-usa.com/wc14.



QUICK INSTALLATION OF STI-7535MED

All specifications and information shown were current as of publication and are subject to change without notice.



STEP 4

INSTALL PLASTIC ANCHORS INTO WALL.
ROUTE KEY SWITCH AND REED SWITCH WIRES FROM BEHIND KEY SWITCH PLATE THROUGH HOLES IN BOTH PLATES (AS SHOWN).
ATTACH BOTH PLATES TO WALL WITH (2) #8 x 1-1/4 in. SCREWS.
(BE SURE ALL WIRES ARE PROTECTED FROM VIEW BEHIND KEY SWITCH PLATE.)

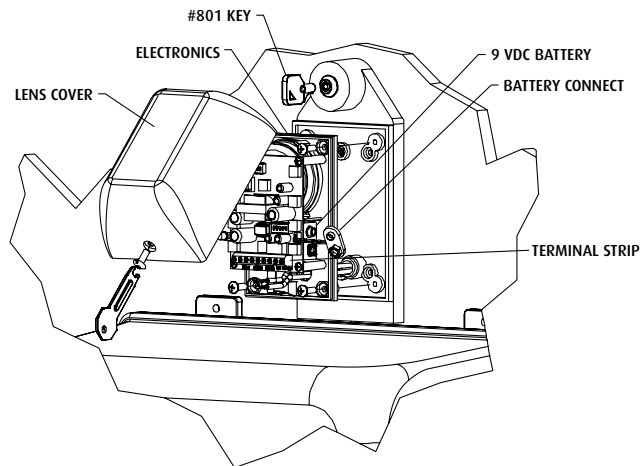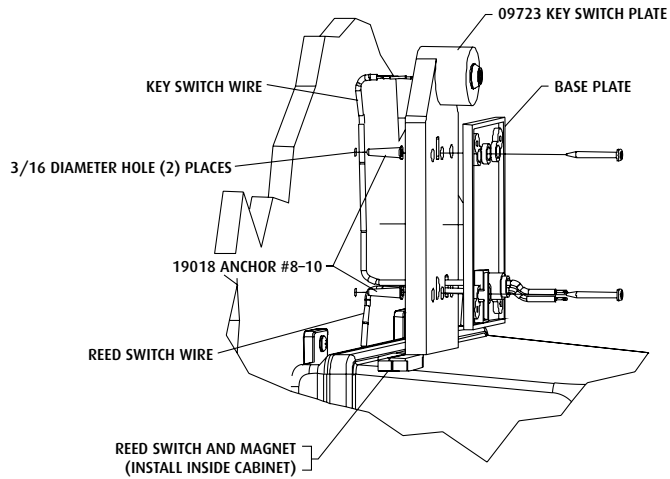

STEP 5

FEED WIRES THROUGH ELECTRONICS PLATE
MOUNT ELECTRONICS TO BASE PLATE.
CONNECT REED SWITCH WIRES TO TERMINAL STRIP.
CONNECT BATTERY.
INSTALL LENS COVER.
CLOSE CABINET DOOR.
TURN KEY SWITCH ON.
OPEN CABINET DOOR TO TEST.

